



KIT FRICTION/PLATE I bought a kit and looked for additional information

How to proceed (step by step)?



Dismounted your drum (have look at how parts are packed: number of parts and position).




Inspect your parts and place your order accordingly.




Remounted the pack with new parts in the same way as original one (Always compare old pack with new one to ensure good job (same height)).



Test functional: pression= put 4 bars in the correct hole (from left pictures) and block the corresponding hole where the air is coming from (from right picture).

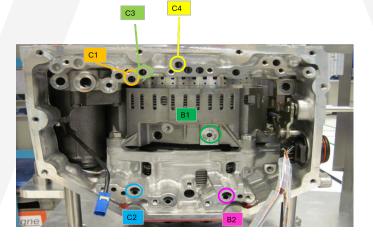

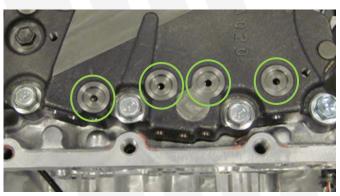

Good practices:

General

- Always work in a clean workplace
- Always confirm that parts are clean before installing
- In case of doubt, compare the new part with previous one

Friction

All Frictions should be well lubricated with ATF before mounting

Bonded Piston

Lip seal should be lubricated with ATF before mounting

ATF

Transmission should be refilled with AISIN recommended ATF

AISIN EUROPE S.A. Avenue de l'Industrie 19, 1420-BRAINE L'ALLEUD, Belgium +32 387 01 10 AlSIN Europe Aftermarket - www.aisinaftermarket.eu / +32 2 387 01 36 - am.contact@aisin-europe.com



Comment on Pack clearance:

Using all new frictions with old Steel/Plates:

- means you go back to original condition
- Clearance is same as origine (OEM)

Using all new frictions with new plates:

• In the plate kit we gave you the selectable to be used with new frictions to ensure correct clearance.

Comment on Content of parts:

Some kits have additional parts that are only used for specific OEM or application:

- 1. Always check how parts are packed when dismounting: number of parts and position
- 2. Always compare old pack with new one to ensure good job (same height)